



User's Guide

The information in this document is subject to change without notice.

Hewlett-Packard® Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Neither HP or Apple shall be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO ANY MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT OR SERVICE TO YOU.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company
P.O. Box 4010
Cupertino, CA 95015-4010
USA

© 2004 Hewlett-Packard Development Company, L.P. All rights reserved.

Apple, the Apple logo, FireWire, iPod, and iTunes are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. For legal or rightholder-authorized copying only. Don't steal music.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

Table of Contents

Quick Start	1
What You Need to Get Started	3
Setting Up iPod to Play Music.....	5
Using iPod.....	11
Using iPod Controls	11
Connecting and Disconnecting iPod.....	18
Organizing and Transferring Your Music.....	23
Adjusting iPod Settings.....	31
Using the Extra Features of Your iPod.....	35
Charging the iPod Battery.....	42
iPod Accessories.....	45
Tips and Troubleshooting.....	47
Learning More, Service, and Support	53
Safety and Cleaning	55
Index	63

Quick Start

Congratulations on purchasing your Apple iPod from HP. Read this section to get started using iPod quickly.

iPod works with the iTunes music software included on the iPod CD. Use iTunes to import songs from your CD or digital music collection to your PC, or use the iTunes Music Store (available in some countries/regions only) to purchase songs and download them to your PC. Then organize the songs and transfer them to iPod. iPod can be used with either desktop or laptop PCs.



Learning to Use iPod

Read this chapter to set up iPod and get started playing music quickly. To learn more about playing music on iPod and using some of its other features, see “Using iPod” on page 11.

iPod Tutorial

For an in-depth tutorial on transferring music to and playing music on iPod, see the *iPod Tutorial* on the iPod CD.

iPod Features

iPod is a music player and much more. With iPod, you can:

- Store thousands of songs from your CD or digital music collection, for listening on the go
- Listen to audiobooks purchased from the iTunes Music Store (available in some countries/regions only) or Audible.com
- Arrange your music in On-The-Go playlists
- Store files and other data, using iPod as an external hard disk
- Change equalizer settings to make music sound better
- Store and synchronize contact and calendar information from your PC
- Store text notes
- Set an alarm
- Record voice memos (using an optional microphone)
- Store digital photos (using an optional photo card reader)
- Play games, and more

To purchase a microphone, photo card reader, and other iPod accessories, go to <http://www.hpshopping.com/musicaccessories>

What You Need to Get Started

To use iPod with a PC, you must have:

- A PC with 500 MHz or higher processor speed
- Microsoft® Windows® 2000 with Service Pack 4 or later, or Windows XP Home or Professional
- iTunes 4.6 or later (iTunes is included on the iPod CD)
To be sure you have the latest version of iTunes, go to <http://www.hp.com/go/music/itunes>
- iPod software (included on the iPod CD)
- Built-in FireWire® or a FireWire card installed, or built-in high-power USB 2.0 or a high-power USB 2.0 card installed



High-power USB 2.0 port



6-pin FireWire 400 port
(IEEE 1394)




4-pin FireWire 400 port
(with optional adapter, not included)

For more information about compatible FireWire and USB cards, go to <http://www.hpshopping.com/musicaccessories>


Your iPod includes the following components:




iPod

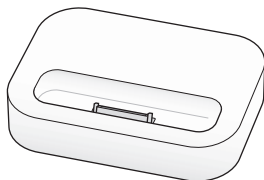

iPod Dock (with some models)

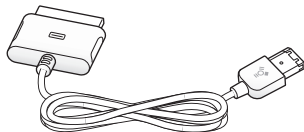


iPod Dock Connector to FireWire Cable

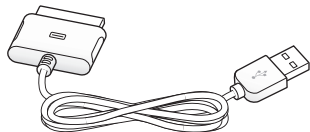

iPod Dock Connector to USB 2.0 Cable



iPod Power Adapter

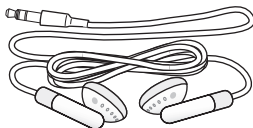


Earphones

Setting Up iPod to Play Music

To set up iPod, you charge the battery, install software from the iPod CD, and import songs from your music CD collection to your PC. Then you transfer the songs to iPod and start listening to music.

Step 1: Charge the Battery

Connect iPod to the iPod Power Adapter using the iPod Dock Connector to FireWire Cable. The built-in battery is 80 percent charged in about two hours, and fully charged in about four hours.

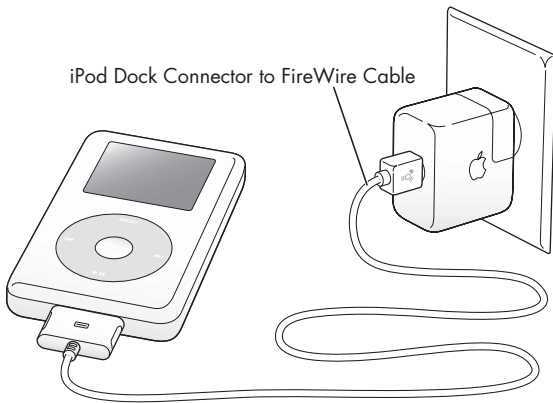

Step 2: Install the Software

Insert the iPod CD into your PC and install iTunes and the iPod software.

Step 3: Import Music to Your PC

Complete this step if you haven't already transferred music to your PC. You can import music from your audio CDs, or if you have an Internet connection, you can buy music online and download it to your PC using the iTunes Music Store. You can browse hundreds of thousands of songs and listen to a 30-second preview of any song. The iTunes Music Store is available in some countries/regions only.

To import music to your PC from an audio CD:

- 1 Insert a CD into your PC. iTunes opens automatically and the CD is selected in the iTunes Source list.
- 2 Uncheck songs you don't want to transfer, then click Import.
- 3 Repeat for any other CDs with songs you'd like to import.

To buy music online:

- 1 Open iTunes and click Music Store in the Source list.
- 2 Click the Account button and follow the onscreen instructions to set up an account or enter your existing Apple Account or America Online (AOL) account information.

For an in-depth tutorial on transferring music to and playing music on iPod, see the *iPod Tutorial* on the iPod CD.

Step 4: Connect iPod and Transfer Music

Connect iPod to your PC using the iPod Dock Connector to USB 2.0 Cable. Be sure the connectors on both ends of the cable are oriented correctly. They can only be inserted one way.

Note: If you have a PC with a 6-pin FireWire 400 port, you can use the iPod Dock Connector to FireWire Cable.

Note: USB 1.1 is not supported.

You can also use the optional iPod Dock (see page 21).



Use the iPod Dock Connector to USB 2.0 Cable to connect to a high-power USB 2.0 port.

When you connect iPod to your PC, iTunes opens automatically and transfers the songs and playlists in your music library to iPod.

Note: If you're connecting using USB 2.0, be sure to connect iPod to a high-power USB 2.0 port directly on your PC, or to a powered USB 2.0 hub that's connected to your PC. iPod won't work if it's connected to a low-power USB 2.0 port, such as those sometimes found on keyboards or other peripherals.

While songs or files are transferred using USB 2.0, the iPod loses charge. Transferring songs or files when iPod isn't sufficiently charged can cause incomplete transfer, loss of the information being transferred, and may require a restore (see page 52). It's best to charge iPod before transferring songs or files. You can charge the iPod by connecting it to your PC without transferring files or by using the iPod Power Adapter.

Note: If you're using a portable or laptop PC with a high-power USB 2.0 port, connect the PC to a power outlet before connecting iPod for best results.

If your PC doesn't have a 6-pin FireWire 400 (IEEE 1394) port or a high-power USB 2.0 port, here are other ways you can connect iPod:

- Purchase a FireWire card or USB 2.0 card, and install it.
- Or, if your PC has a 4-pin FireWire port, you can use an optional 6-pin-to-4-pin FireWire adapter.


Note: You can't charge iPod through your PC using a 4-pin FireWire port.

For more information on cables and compatible FireWire and USB cards, go to <http://www.hpshopping.com/musicaccessories>

Step 5: Play Music

When the song transfer is complete, a message on the iPod screen says “OK to disconnect.” Squeeze both sides of the Dock connector to disconnect the cable from iPod.

Then use the Click Wheel and Select button to browse for a song. Press the Play or Select button and enjoy!

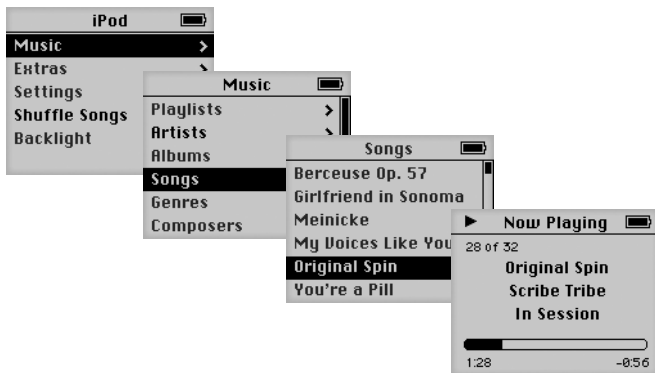

To Learn More

Read the next chapter to learn more about using the Click Wheel and the other iPod controls, transferring music to and managing music on iPod, using other features of iPod, charging the battery, and using iPod accessories.

Using iPod


Read this section to learn about using iPod controls, transferring music, charging the battery, and using the extra features of your iPod.

Using iPod Controls

Press any button to turn on iPod. The main menu appears.



Use the Click Wheel and Select button to navigate through onscreen menus, play songs, change settings, and view information. Move your thumb lightly around the Click Wheel to highlight a menu item. Press the Select button to select the item. Press Menu on the Click Wheel to go back to the previous menu.

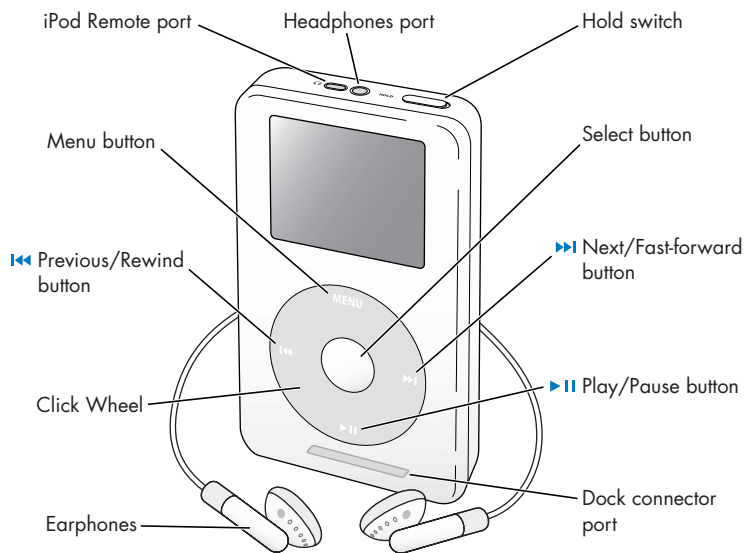

iPod Controls

Reset iPod

(For use during troubleshooting)

Toggle the Hold switch (set it to Hold, then turn it off again). Then press the Menu and Select buttons simultaneously for about 6 seconds, until the Apple logo appears.

Turn on iPod

Press any button.

Turn off iPod

Press and hold Play/Pause.

Turn the backlight on or off

Press and hold Menu or select Backlight from the main menu.

Select a menu item

Scroll to the item and press the Select button.

Go back to the previous menu

Press Menu.

Browse for a song

Select Music from the main menu.

Play a song

Highlight the song and press the Select or Play/Pause button. iPod must be disconnected from your PC to play songs.

Play all the songs in a list

Highlight the list title (an album title, or the title of a playlist, for example) and press Play/Pause.

Change the volume

From the Now Playing screen, use the Click Wheel. You can also use the optional iPod Remote (available at <http://www.hpshopping.com/musicaccessories>) from any screen.

Pause a song

Press Play/Pause when no song or list is highlighted.

iPod Controls

Disable the iPod buttons

(So you don't press them accidentally)

Set the Hold switch to Hold
(an orange bar appears).

Skip to any point in a song

From the Now Playing screen, press the Select button to show the scrubber bar. Then scroll to any point in the song.

Skip to the next song

Press Next/Fast-forward.

Start a song over

Press Previous/Rewind.

Play the previous song

Press Previous/Rewind twice.

Fast-forward

Press and hold Next/Fast-forward.

Rewind

Press and hold Previous/Rewind.


Disabling iPod Buttons Using the Hold Switch

If you're carrying iPod in your pocket and you don't want to press the buttons or turn it on accidentally, you can make the buttons inactive.

- Set the Hold switch to Hold.



Slide the switch toward the center (so you can see the orange bar) to disable the controls.

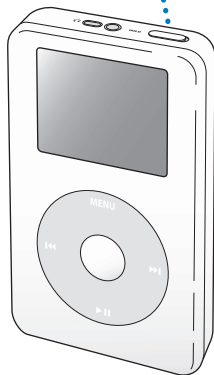

Making Playlists on iPod

You can set iPod to play the songs you want in the order you want. When you create a list of songs on your iPod, the songs appear in an On-The-Go playlist.

To create an On-The-Go playlist:

- 1 Highlight a song and press and hold the Select button until the song title flashes.
- 2 Repeat step 1 for other songs you want to add.
- 3 Select Music > Playlists > On-The-Go to view your list of songs.

You can also queue entire lists of songs at once. For example, to queue an album, highlight the album title and press and hold the Select button until the album title flashes.

To play songs in the On-The-Go playlist:

- Select Music > Playlists > On-The-Go and select a song.

To remove a song from the On-The-Go playlist:

- Highlight a song in the playlist, and hold down the Select button until the song title flashes.

To clear the entire On-The-Go playlist:

- Select Music > Playlists > On-The-Go > Clear Playlist.

To save On-The-Go playlists on your iPod:

- Select Music > Playlists > On-The-Go > Save Playlist > Save Playlist.

The first playlist is saved as “New Playlist 1” in the Playlists menu. The On-The-Go playlist is cleared. You can save as many On-The-Go playlists as you like.

To transfer On-The-Go playlists to your PC:

- If iPod is set to transfer songs automatically (see page 27), and you create an On-The-Go playlist, the playlist automatically transfers to iTunes when you connect iPod. You see the new On-The-Go playlist in the iTunes Source list.

Rating Songs

You can assign a rating to a song (from 1 to 5 stars) to indicate how much you like it. You can use song ratings to help you create playlists automatically in iTunes (see “About Smart Playlists” on page 26).

To rate a song:

- 1 Start playing the song.
- 2 From the Now Playing screen, press the Select button twice.
- 3 Use the Click Wheel to select a rating.

Connecting and Disconnecting iPod

You connect iPod to your PC to transfer and manage music, and, in most cases, to charge the battery.

To connect iPod to your PC:

- Connect iPod to your PC using the iPod Dock Connector to USB 2.0 Cable. Be sure the connectors on both ends of the cable are oriented correctly. They can only be inserted one way.

Note: If you have a PC with a 6-pin FireWire 400 port, you can use the iPod Dock Connector to FireWire Cable.


Note: USB 1.1 is not supported.

- Or, if you have an iPod Dock (see page 21), connect the appropriate cable to a FireWire or high-power USB 2.0 port on your PC and connect the other end to the Dock. Then put iPod in the Dock.

By default, iPod imports songs automatically when you connect it to your PC. When this automatic transfer is done, you can disconnect iPod.

Disconnecting iPod

You shouldn't disconnect iPod while music is being transferred. You can easily see if it's OK to disconnect iPod by looking at the screen.

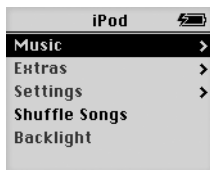

If you see the main menu or a large battery icon, you can disconnect iPod from your PC.



If you see this message, you must eject iPod before disconnecting it from your PC.

If you set iPod to transfer songs manually (see page 28) or enable iPod for use as a hard disk (see page 35), you must eject iPod before disconnecting it.

To eject iPod:

- Select iPod in the iTunes Source list and click the Eject button.



You can eject iPod by clicking the Safely Remove Hardware icon in the Windows system tray and selecting your iPod.


To disconnect iPod:

- *If iPod is connected to an iPod cable, squeeze both sides of the Dock connector to disconnect the cable from iPod.*
- *If iPod is in the Dock, simply remove it.*

Important: Don't disconnect iPod if you see the "Do not disconnect" message. You could damage files on iPod. If you see this message, you must eject iPod before disconnecting it.

Connecting iPod Using the iPod Dock (Included With Some Models)

The iPod Dock holds iPod upright as it charges or transfers music. Connect the Dock to your PC using the same cable you use with iPod, or connect it to a power outlet using the FireWire cable and power adapter. Then put iPod in the Dock.

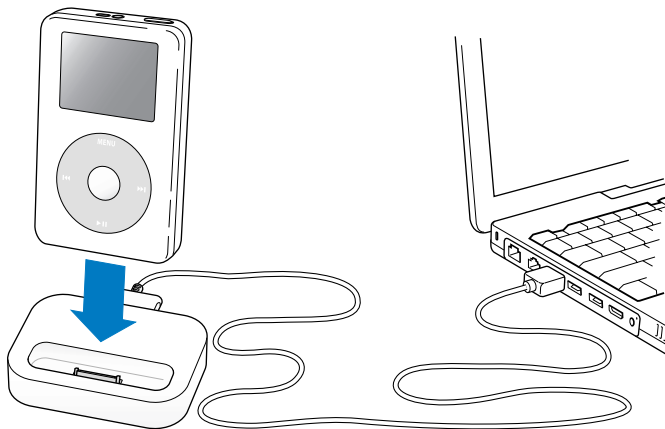


Note: Be sure the connectors on the cable are oriented correctly. Each connector can only be inserted one way.

Using the iPod Dock, you can play music from iPod over external powered speakers or a home stereo. You need an audio cable with a standard 3.5 millimeter stereo miniplug (many external speakers have this type of cable attached).

To play music from iPod using the Dock:

- 1** Place iPod in the Dock.
- 2** Connect the speakers or stereo to the Dock Line Out port using an audio cable with a 3.5 millimeter stereo miniplug.

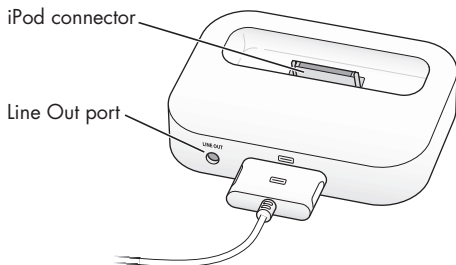

- 3** Use the iPod controls to play a song.
When the Dock is connected to an external audio source, use the volume controls on the external source to change the volume.

Organizing and Transferring Your Music

For instructions for getting started playing music on iPod, see “Setting Up iPod to Play Music” on page 5. Read on for more information about organizing and transferring your music.

About iTunes

iTunes is the software application you use to manage the music on your PC and transfer music to iPod. When you connect iPod to your PC, iTunes opens automatically.

Here are some of the things you can do with iTunes:

- Purchase and download songs and audiobooks from the iTunes Music Store (available in some countries/regions only)
- Listen to CDs and digital music
- Add music from CDs to your music library, so you don’t need to have the CD in the drive to play music
- Make your own CDs (if your PC has a CD burner)
- Publish your playlists to the iTunes Music Store (available in some countries/regions only)
- Create dynamic “Party Shuffle” playlists
- Listen to Internet radio stations

This guide explains how to transfer songs to iPod using iTunes and manage songs on iPod. For information about using the other features of iTunes, open iTunes and choose Help > iTunes and Music Store Help.

About the iTunes Music Store

Using iTunes, you can preview, purchase, and download your favorite songs from the iTunes Music Store (available in some countries/regions only). There are hundreds of thousands of songs available for purchase. You can use an Apple Account to purchase songs from the music store, or if you have an America Online (AOL) account, you can use that.

To browse for and purchase music:

- 1 Open iTunes and click Music Store in the Source list.
- 2 Click the Account button and follow the onscreen instructions to set up an account or enter your existing Apple Account or AOL account information.

You can only have music from five different Music Store accounts on one iPod. For more information about the iTunes Music Store, open iTunes and choose Help > iTunes and Music Store Help.

Audio File Formats Supported by iPod

- AAC (M4A, M4B, M4P) (up to 320 Kbps)
- Apple Lossless (a high-quality compressed format, available using iTunes 4.5 or later)
- MP3 (up to 320 Kbps)
- MP3 Variable Bit Rate (VBR)
- WAV
- AA (Audible.com spoken word, formats 2, 3, and 4)
- AIFF

When you import music from a CD using iTunes, it is converted to AAC format by default.

If you are using iTunes 4.5 or later on a PC, you can convert nonprotected WMA files to AAC or MP3 format. This can be useful if you have a library of music encoded in WMA format. For more information, open iTunes and choose Help > iTunes and Music Store Help.

iPod does not support WMA, MPEG Layer 1, MPEG Layer 2 audio files, or Audible.com format 1.

About Playlists

Using iTunes, you can organize songs into playlists. For example, you can create a playlist with songs to listen to while exercising or with songs for a particular mood.

You can create as many playlists as you like using any of the songs in your PC's music library. Putting a song in a playlist doesn't remove it from the library.

When you connect and update iPod, the playlists are transferred to iPod. To browse through playlists, select Music > Playlists on iPod.

About Smart Playlists

Using iTunes, you can automatically create customized Smart Playlists from the songs in your library. You can create a Smart Playlist that includes only certain genres of music, songs by certain artists, or songs that match particular criteria. For example, you could create a playlist that's no more than 3 gigabytes (GB) in size and includes only songs you have rated 3 stars or higher (see "Rating Songs" on page 17).

After you create a Smart Playlist, any songs on iPod that meet the Smart Playlist's criteria are automatically added to the Smart Playlist.

Creating Playlists on Your PC

To create a playlist:

- In iTunes, click the Add (+) button and type a name for the playlist, then drag songs from the library or another playlist to the new playlist.

To create a Smart Playlist:

- In iTunes, choose File > New Smart Playlist and choose the criteria for your playlist. Any songs from your library that match the criteria you choose are automatically added to the playlist.

Transferring Songs and Playlists to iPod Automatically

By default, iPod updates automatically when you connect it to your PC. iTunes updates the iPod music library to match the songs and playlists in your PC's music library, transferring new songs to iPod and deleting songs from iPod that aren't in your music library.

You can set iPod to transfer only certain songs in your iTunes music library. This is useful if you have more music on your PC than will fit on your iPod.

To update iPod with only certain songs:

- 1 In iTunes, check the boxes next to songs you want to transfer (by default, all songs are checked).
- 2 Select iPod in the iTunes Source list and click the Options button.



- 3 Select "Only update checked songs."

To set iPod to update only selected playlists:

- 1 In iTunes, select iPod in the Source list and click the Options button.
- 2 Select "Automatically update selected playlists only."

Transferring Songs and Playlists to iPod Manually

You can set iPod to transfer songs manually, so you can transfer individual songs and playlists.

When iPod is set to transfer songs manually, iTunes won't update it automatically when you connect it to your PC.

To set iPod to transfer songs manually:

- 1 In iTunes, select iPod in the Source list and click the Options button.



Options button

- 2 Select "Manually manage songs and playlists."

To transfer a song or playlist to iPod manually:

- In iTunes, drag a song or playlist to iPod in the Source list.

Deleting Songs and Playlists From iPod Manually

If you have set iPod to transfer songs manually (see above), you can delete songs and playlists from iPod individually. Songs deleted from iPod manually are not deleted from the iTunes library.

To delete a song or playlist from iPod:

- 1 Select iPod in the iTunes Source list.
- 2 Select a song or playlist and press the Delete key on the keyboard.

If you delete a playlist, the songs in the playlist remain on iPod.

Modifying Playlists on iPod Manually

If you have set iPod to transfer songs manually (see above), you can create new playlists on iPod, and add songs to or delete songs from playlists already on iPod.

To create a new playlist on iPod:

- 1 Select iPod in the iTunes Source list and click the Add (+) button.
- 2 Drag songs to the new playlist.

To modify a playlist on iPod:

- Drag a song to a playlist on iPod to add the song. Select a song in a playlist and press the Delete key on your keyboard to delete the song.

Listening to Spoken Word Audio

You can purchase and download spoken word audiobooks from the iTunes Music Store (available in some countries/regions only) or from Audible.com and listen to them on your iPod.

You can use iTunes to transfer audiobooks to your iPod the same way you transfer songs.

If you stop listening to an audiobook on iPod and go back to it later, the audiobook begins playing from where you left off.

Unless you're playing songs from within playlists, iPod skips audiobooks when set to shuffle.

Setting the Reading Speed

You can play audiobooks at speeds faster or slower than normal.

To set the playing speed of an audiobook:

- Select Settings > Audiobooks.

Setting the reading speed only affects audiobooks purchased from the iTunes Music Store or Audible.com.

Seeing How Many Songs Are on iPod

To see how many songs are stored on iPod, how much disk space is left, and other information, select Settings > About in the iPod main menu.

Adjusting iPod Settings

You can change settings directly on iPod in the Settings menu.

Setting iPod to Shuffle Songs

You can set iPod to shuffle (play songs or albums in random order). iPod shuffles songs within the list (album or playlist, for example) from which the songs are playing.

You can shuffle or reshuffle songs you are already playing, or you can set iPod to shuffle songs or albums every time you play a song.

To shuffle or reshuffle songs you are already playing:

- Select Shuffle Songs from the iPod main menu.

If you select Shuffle Songs when no songs are playing, iPod begins playing songs from your entire music library in random order.

To set iPod to shuffle songs or albums every time you play a song:

- 1 Select Settings from the iPod main menu.
- 2 Set Shuffle to Songs or to Albums.

When you set iPod to shuffle albums, it plays all the songs on an album in order, then randomly selects another album and plays through it in order.

Unless you're playing songs from within playlists, iPod skips audiobooks when set to shuffle.

Setting iPod to Repeat Songs

You can set iPod to repeat a song over and over, or to repeat a sequence of songs. iPod repeats songs within the list from which the songs are playing.

To set iPod to repeat songs:

- Select Settings from the iPod main menu.
 - *To repeat all songs in the list*, set Repeat to All.
 - *To repeat one song over and over*, set Repeat to One.

Setting the Click Wheel Sound

When you scroll through menu items, you can hear a clicking sound through the iPod internal speaker to let you know the Click Wheel is working. You can set the Click Wheel sound to play through the headphones instead, or you can turn it off.

To set how iPod plays the Click Wheel sound:

- Select Settings from the iPod main menu.
 - *To set the Click Wheel sound to play through the headphones*, set Clicker to Headphones.
 - *To turn off the Click Wheel sound*, set Clicker to Off.
 - *To set the Click Wheel sound to play through the iPod internal speaker*, set Clicker to Speaker.
 - *To set the Click Wheel sound to play through both the iPod internal speaker and the headphones*, set Clicker to Both.

Setting Songs to Play at the Same Relative Volume Level

iTunes can automatically adjust the volume of songs, so they play at the same relative volume level. You can set iPod to use the iTunes volume settings.

To set iTunes to adjust all songs to play at the same relative sound level:

- 1 In iTunes, choose Edit > Preferences.
- 2 Click Effects and select Sound Check.

To set iPod to use the iTunes volume settings:

- Select Settings > Sound Check.

If you have not activated Sound Check in iTunes, setting it on iPod has no effect.

Using the iPod Equalizer

You can use equalizer presets to change iPod sound to suit a particular music genre or style. For example, to make rock music sound better, set the equalizer to Rock.

- Select Settings > EQ and select an equalizer preset.

If you have assigned an equalizer preset to a song in iTunes and the iPod equalizer is set to Off, then the song plays using the iTunes setting. See iTunes and Music Store Help for more information.

Setting the Backlight Timer

You can set the backlight to turn on for a certain amount of time when you press a button or use the Click Wheel.

- Select Settings > Backlight Timer and select the time you want.

Even if you don't set the backlight timer, you can turn on the backlight at any time by pressing and holding the Menu button on iPod or selecting Backlight from the main menu. After a few seconds, the backlight turns off.

Adding or Removing Items From the Main Menu

You can add often-used items to the iPod main menu. For example, you can add a “Songs” item to the main menu, so you don’t have to select Music before you select Songs.

To add or remove items from the main menu:

- Select Settings > Main Menu.

Setting and Viewing Date and Time

To set the date and time:

- Select Settings > Date & Time.

To view the date and time:

- Select Extras > Clock.

To set iPod to display the time in the title bar:

- Select Settings > Date & Time.

If you set iPod to display the time in the title bar, you can see the time from any iPod menu screen.

Setting the Language

iPod can be set to use different languages.

- Select Settings > Language and select a language.

Using the Extra Features of Your iPod

Using iPod as an External Hard Disk

You can use iPod as a hard disk, to store and transfer data files.

To enable iPod as a hard disk:

- 1 In iTunes, select iPod in the Source list and click the Options button.



Options button

- 2 Select “Enable disk use.”

When you use iPod as a hard disk, the iPod disk icon appears as the next available drive letter in Windows Explorer on a PC.

Note: Selecting “Manually manage songs and playlists” in the Options window also enables iPod to be used as a hard disk.

Note: To transfer music files to iPod, you must use iTunes. Songs transferred via iTunes do not appear on iPod in Windows Explorer. Likewise, if you copy music files to iPod in Windows Explorer, you won’t be able to play them on iPod.

Preventing iTunes From Opening Automatically

If you use iPod primarily as a hard disk, you may want to keep iTunes from opening automatically when you connect iPod to your PC.

To prevent iTunes from opening automatically when you connect iPod to your PC:

- 1 In iTunes, select iPod in the Source list.
- 2 Click the Options button and deselect “Open iTunes when attached.”



Options button

Setting the Sleep Timer

You can set iPod to turn off automatically after a specific period of time.

- Select Extras > Clock > Sleep Timer and select the time you want.

When you set the sleep timer, a clock icon and the number of minutes left until iPod turns off appear in the Now Playing screen on iPod.

Setting the Alarm

You can use iPod as an alarm clock.

To set an alarm:

- 1 Select Extras > Clock > Alarm Clock.
- 2 Set Alarm to On.
- 3 Select a sound.

If you select Beep, the alarm will be audible through the internal speaker. If you select a playlist, you'll need to connect iPod to speakers or headphones to hear the alarm.

Importing Addresses, Phone Numbers, and Calendar Events

Your iPod can store contacts and calendar events.

You can transfer information to iPod manually. iPod must be enabled as a hard disk (see "Using iPod as an External Hard Disk" on page 35).

To import contact information manually:

- 1 Connect iPod and open your favorite e-mail or contacts application. Importing contacts works with Palm Desktop, Microsoft Outlook, Microsoft Entourage, and Eudora, among others.
- 2 Drag contacts from the application's address book to the iPod Contacts folder.

To import appointments and other calendar events manually:

- 1 Export calendar events from any calendar application that uses the standard vCal format (filenames end in .vcs).
- 2 Drag the files to the Calendars folder on iPod.

To view contacts on iPod:

- Select Extras > Contacts.

To view calendar events:

- Select Extras > Calendar.

Storing and Reading Notes and Other Information

You can store and read text notes on iPod. iPod must be enabled as a hard disk (see page 35).

- 1 Save a document in any word-processing application as a text (.txt) file.
- 2 Place the file in the Notes folder on iPod.

To view notes:

- Select Extras > Notes.

Recording Voice Memos

You can record voice memos using an optional iPod-compatible microphone (available for purchase at <http://www.hpshopping.com/musicaccessories>). You can store voice memos on your iPod and transfer them to your PC.

To record a voice memo:

- 1 Connect a microphone to the Headphones port on your iPod and select Record to begin recording.
- 2 Hold the microphone a few inches from your mouth and speak. To pause recording, select Pause.
- 3 When you're finished recording, select Stop and Save. Your recording is saved and listed by date and time recorded.

To play a recording:

- Select Extras > Voice Memos and select the recording.

Note: The Voice Memos menu item doesn't appear until you connect a microphone.

To transfer voice memos to your PC:

Voice memos are saved in a Recordings folder on iPod in the WAV file format. If you enable iPod for disk use, you can drag voice memos from the folder to copy them.

If iPod is set to transfer songs automatically (see page 27) and you record voice memos, the voice memos are automatically transferred to a playlist in iTunes when you connect iPod. You see the new Voice Memos playlist in the iTunes Source list.

Storing Digital Photos

Using an optional iPod-compatible photo card reader (available for purchase at <http://www.hpshopping.com/musicaccessories>) and a standard digital camera and photo card, you can store photos on iPod, then delete them from the photo card and take more pictures. Then later you can transfer the photos from iPod to your PC using a standard digital photo application.

To store photos on iPod:

- 1 Insert a photo card into the photo card reader and connect the photo card reader to the Dock connector port on iPod.
- 2 Select Import.

Photos are listed on iPod by roll number.

Note: Some digital photo storage devices may work differently. Consult the instructions that came with the device.

To view information about photos stored on iPod:

- Select Extras > Photo Import and select the roll number.

The type of media, number of photos, and size of the roll are displayed. You can't view the photos on iPod.

Note: The Photo Import menu item doesn't appear unless you connect a photo card reader.

To erase photos from a photo card:

- 1 Import photos from the card (see above).
- 2 Select Erase Card. All photos are deleted from the photo card.

To transfer photos to your PC:

- Connect iPod to your PC and open the application you use to transfer photos from your digital camera. See the documentation that came with the application for more information.

Note: Photos are stored in a DCIM (digital camera images) folder on iPod. You can also transfer images to your PC by opening this folder and dragging the image files to the desktop. iPod must be enabled for use as a hard disk.

For more information about using an iPod-compatible photo card reader, see the instructions that came with the reader.

Playing Games

iPod has a number of games.

To play a game:

- Select Extras > Games and select a game.

Charging the iPod Battery

iPod has an internal, nonremovable battery. If iPod isn't used for a while, the battery may need to be charged.

The iPod battery is 80-percent charged in about two hours, and fully charged in about four hours. If you charge iPod by connecting it to your PC, it may take longer to charge, especially if you are transferring files or playing music.

You can charge the iPod battery in two ways:

- In most cases you can charge iPod by connecting it to your PC.
- You can also charge iPod by connecting it to the power adapter and a working electrical outlet.

To charge the battery using your PC:

- Connect iPod to a 6-pin FireWire port or high-power USB 2.0 port on your PC using the appropriate cable. The PC must be turned on and not in sleep mode.


If the battery icon in the upper-right corner of the iPod screen shows a lightning bolt, the battery is charging.



If you don't see the lightning bolt, you must charge the battery using the iPod Power Adapter.

To charge the battery using the iPod Power Adapter:

- 1 Connect the AC plug adapter to the power adapter (this may already be assembled).
- 2 Connect the iPod Dock Connector to FireWire Cable included with iPod to the power adapter, and plug the other end of the cable into iPod.
- 3 Plug the power adapter into a working electrical outlet.

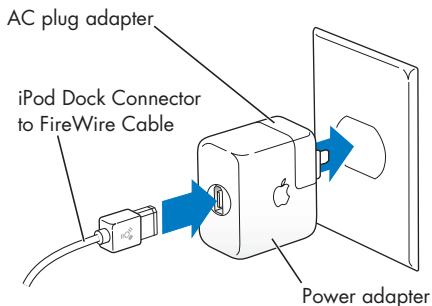

Warning Make sure the power adapter is fully assembled before plugging it into an electrical outlet.

Battery States

When iPod is not connected to a power source, a battery icon in the top right corner of the iPod screen shows about how much charge is left.



Battery about
halfway charged

If iPod is connected to a power source, the battery icon animates to show that the battery is charging.



Battery charging

If you connect iPod to a power source and the battery icon does not animate, the battery is fully charged.



Battery fully charged
(if not animated)

You can disconnect and use iPod before it is fully charged.

Note: Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings. For more information, go to <http://www.hp.com/go/music/battery>


iPod Accessories

iPod comes with some accessories, and many other accessories are available at <http://www.hpshopping.com/musicaccessories>

iPod Remote (Available Separately)

To use the iPod Remote, connect it to the iPod Remote port, then connect the Earphones (or another set of headphones) to the remote. Use the buttons on the remote just as you would use the iPod buttons.

When a song is playing on iPod, adjust the volume using the volume control on the remote.

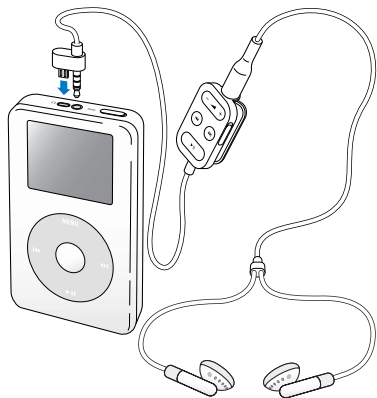

Use the remote's Hold switch to disable the remote's buttons. The iPod Hold switch and the iPod Remote Hold switch do not affect one another.

Earphones

iPod comes with a pair of high-quality earbud headphones.

To use the earbud headphones:

- Plug them in to the Headphones port, then place the earbud in your ear as shown.



Warning Listening to music at high volume over extended periods of time can damage your hearing.

Tips and Troubleshooting

Most problems with iPod can be solved quickly by following the advice in this chapter.

Resetting iPod

Most problems with iPod can be solved by resetting it.

To reset iPod:

- 1 Connect iPod to a power outlet using the iPod Power Adapter.
- 2 Toggle the Hold switch on and off (set it to Hold, then turn it off again).
- 3 Press and hold the Select and Menu buttons for at least 6 seconds, until the Apple logo appears.

If Your iPod Won't Turn On or Respond

- Make sure the Hold switch is off.
- If you're using the iPod Remote, make sure the remote's Hold switch is off.
- If that doesn't work, connect iPod to the iPod Power Adapter and connect the adapter to a working electrical outlet. Your iPod battery may need to be recharged.
- If that doesn't work, your iPod may need to be reset (see above).
- If that doesn't work, you may need to restore iPod software. See "iPod Software Update and Restore" on page 51.

If You Want to Disconnect iPod, but the Screen Says “Do Not Disconnect”

- If iPod is transferring music, wait for the transfer to complete.
- Select iPod in the iTunes Source list and click the Eject button.
- If iPod disappears from the iTunes Source list, but you still see the “Do Not Disconnect” message on the iPod screen, go ahead and disconnect iPod.
- If iPod doesn’t disappear from the iTunes Source list, click the Safely Remove Hardware icon in the system tray and select your iPod. If you still see the “Do Not Disconnect” message, restart your PC and eject iPod again.

If Your iPod Isn’t Playing Music

- Make sure the Hold switch is off.
- If you’re using the iPod Remote, make sure the remote’s Hold switch is off.
- Make sure the headphones connector is pushed in all the way.
- Make sure the volume is adjusted properly.
- If that doesn’t work, push the Play/Pause button. Your iPod may be paused.
- If you’re using the iPod Dock, be sure the iPod is seated firmly in the Dock and make sure all cables are connected properly.
- If you are using the Dock Line Out port, make sure your external speakers or stereo are turned on and working properly.

If You Connect iPod to Your PC and Nothing Happens

- Make sure you have installed the software from the iPod CD.
- Make sure you have the required PC and software. See “What You Need to Get Started” on page 3.
- Your iPod may need to be reset (see page 47).
- Check the cable connections. Unplug the cable at both ends and make sure no foreign objects are in the FireWire or USB ports. Then plug the cable back in securely. Use only iPod cables. Be sure the connectors on the cables are oriented correctly. They can only be inserted one way.
- If you’re connecting iPod to a portable or laptop PC using the iPod Dock Connector to USB 2.0 Cable, connect the PC to a power outlet before connecting iPod.
- If that doesn’t work, restart your PC.
- If that doesn’t work, you may need to restore iPod software. See “iPod Software Update and Restore” on page 51.

If You Connect iPod to a USB Port and It Doesn't Work Correctly

- You must use a FireWire port or a USB 2.0 port to connect iPod. USB 1.1 is not supported and is significantly slower than FireWire and USB 2.0. If your PC doesn't have a FireWire port or USB 2.0 port, you can purchase a Windows-certified FireWire card or USB 2.0 card and install it. For more information, go to <http://www.hpshopping.com/musicaccessories>
- If you're connecting iPod to a portable or laptop PC using the iPod Dock Connector to USB 2.0 Cable, connect the PC to a power outlet before connecting iPod.
- If you're using a PC with a 6-pin FireWire port, connect iPod to a FireWire port using the FireWire cable that came with iPod.

If the Screen is Too Light or Too Dark

- 1 Select Settings > Contrast.
- 2 Use the Click Wheel to adjust the contrast.

If you accidentally set the screen contrast too light or too dark, you can reset it to the default by pressing and holding the Menu button for about 4 seconds.

If You Accidentally Set iPod to Use a Language You Don't Understand

You can reset the language.

- 1 Push Menu repeatedly until the main menu appears.
- 2 Select the fourth menu item (Settings).
- 3 Select the last menu item (Reset All Settings).
- 4 Select the second menu item (Reset) and select a language.

Other iPod settings, such as song repeat, are also reset.

Note: If you have added or removed items from the iPod main menu (see page 34), the Settings menu may be in a different place.

If Your iPod Remote Isn't Working

- Make sure the remote's Hold switch is off.
- Make sure the remote is plugged firmly into iPod, and that the headphones are plugged firmly into the remote.

The iPod Remote is included with some models of iPod, and can be purchased separately at <http://www.hpshopping.com/musicaccessories>

If You Want to Use Your iPod with a PC and a Mac

If you are using your iPod with a PC and you want to use it with a Mac (or vice versa), you must restore the iPod software for use with the other computer using iPod Software Update (see "iPod Software Update and Restore" below). Restoring the iPod software erases all data from iPod, including all songs.

You cannot switch from using iPod with a PC to using it with a Mac (or vice versa) without erasing all data on iPod.

iPod Software Update and Restore

Apple periodically updates iPod software to improve performance or add features. It is recommended that you update your iPod to use the latest software.

You can choose either to update or to restore the iPod software.

- *If you choose to update*, the software is updated, but your settings and songs are not affected.

- *If you choose to restore*, all data is erased from your iPod, including songs, files, contacts, photos, calendar information, and any other data. All iPod settings are restored to their original state.

To update or restore iPod with the latest software:

- 1 Go to <http://www.hp.com/go/music/update> and download the latest iPod Update.
- 2 Double-click the software install file and follow the onscreen instructions to install the iPod Update.
- 3 Connect iPod to your PC and open iTunes. If the iPod Update application doesn't open automatically, you can find the updater by clicking Start > All Programs > iPod.
- 4 Follow the onscreen instructions to update or restore iPod software.

If you use the iPod Update application and it doesn't see that iPod is connected to your PC, reset iPod (see page 47).

If you want to restore iPod software and you don't have an Internet connection, you can use the iPod Update that was installed on your PC when you installed the software from the iPod CD.

To restore iPod software using the updater that came on your iPod CD:

- You can find the updater by clicking Start > All Programs > iPod.

Learning More, Service, and Support

There is more information about using iPod on the iPod CD, in onscreen help, and on the Web.

iPod Tutorial

For an in-depth tutorial on transferring music to and playing music on iPod, see the *iPod Tutorial* on the iPod CD.

Onscreen Help

- To learn more about using iPod and iTunes, open iTunes and choose Help > iTunes and Music Store Help.

Online Resources

For the latest information on iPod, go to <http://www.hp.com/music>

For iPod service and support information go to <http://www.hp.com/support>

To register iPod (if you didn't do it when you installed software from the iPod CD), go to <http://register.hp.com>. Please be sure to have your product number, model number, and serial number handy.

For an online iTunes tutorial (available in some areas only), go to <http://www.apple.com/support/itunes>

Obtaining Warranty Service

If the product appears to be damaged or does not function properly, please follow the advice in this booklet, the onscreen help, and the online resources.

If the unit still does not function, go to your *Warranty and Support Guide* for instructions on how to obtain warranty service.

Finding the Serial Number of Your iPod

The serial number is printed on the back of your iPod. You can also find it by selecting Settings > About.

Safety and Cleaning

Read on to learn about using iPod safely and cleaning iPod.

Important Safety Instructions

When setting up and using your iPod, remember the following:

- Read all the installation instructions carefully before you plug your iPod Power Adapter into a power outlet.
- Keep these instructions handy for reference by you and others.
- Follow all instructions and warnings dealing with your iPod.

Warning Electrical equipment may be hazardous if misused. Operation of this product, or similar products, must always be supervised by an adult. Do not allow children access to the interior of any electrical product and do not permit them to handle any cables.

Avoid Hearing Damage

Warning Permanent hearing loss may occur if earbuds or headphones are used at high volume. You can adapt over time to a higher volume of sound, which may sound normal but can be damaging to your hearing. Set your iPod volume to a safe level before that happens. If you experience ringing in your ears, reduce the volume or discontinue use of your iPod.

Do Not Use While Driving

Important: Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop listening to your iPod if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Connectors and Ports

Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

Battery

Do not attempt to remove the iPod battery. iPod must be disposed of according to local environmental regulations.

Using the Power Adapter

- Use only the power adapter that came with your iPod. Adapters for other electronic devices may look similar, but they may damage your iPod.
- The only way to shut off power to your power adapter completely is to disconnect it from the power source.
- Always leave space around your power adapter. Do not use this equipment in a location where airflow around the power adapter is confined, such as a bookcase.
- When connecting or disconnecting your power adapter, always hold the power adapter by its sides. Keep fingers away from the metal part of the plug.
- Before connecting the FireWire cable to the power adapter, make sure there are no foreign objects inside the power adapter's FireWire port.
- The power adapter for your iPod is a high-voltage component and should not be opened for any reason, even when the iPod is off. If the power adapter needs service, see "Learning More, Service, and Support" on page 53.
- Never force a connector into the power adapter FireWire port. If the connector and port do not join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

About Operating and Storage Temperatures

- Operate your iPod in a place where the temperature is always between 0° and 35° C (32° to 95° F).
- Store your iPod in a place where the temperature is always between –20° and 45° C (–4° to 113° F). Don't leave iPod in your car, since temperatures in parked cars can exceed this range.
- iPod play time may temporarily shorten in low-temperature conditions.
- When you're using your iPod or charging the battery, it is normal for the bottom of the case to get warm. The bottom of the iPod case functions as a cooling surface that transfers heat from inside the unit to the cooler air outside.

Avoid Wet Locations

Warning To reduce the chance of shock or injury, do not use your iPod in or near water or wet locations.

- Keep your iPod and power adapter away from sources of liquids, such as drinks, washbasins, bathtubs, shower stalls, and so on.
- Protect your iPod and the power adapter from direct sunlight and rain or other moisture.
- Take care not to spill any food or liquid on iPod or its power adapter. If you do, unplug iPod before cleaning up the spill.

In case of a spill, you may have to send your equipment to HP for service. See “Learning More, Service, and Support” on page 53.

Do Not Make Repairs Yourself

Warning Do not attempt to open your iPod or power adapter, disassemble it, or remove the battery. You run the risk of electric shock and voiding the limited warranty. No user-serviceable parts are inside.

For service, see “Learning More, Service, and Support” on page 53.

Cleaning

Follow these general rules when cleaning the outside of your iPod and its components:

- Make sure your iPod is unplugged.
- Use a damp, soft, lint-free cloth. Avoid getting moisture in openings.
- Don't use aerosol sprays, solvents, alcohol, or abrasives.

About Handling

Your iPod may be damaged by improper storage or handling. Be careful not to drop your iPod when playing or transporting the device.

Communications

Regulation Information

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See instructions if interference to radio or television reception is suspected.

Radio and Television Interference

This PC equipment generates, uses, and can radiate radio-frequency energy. If it is not installed and used properly — that is, in strict accordance with HP's instructions — it may cause interference with radio and television reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your PC system is causing interference by turning it off. If the interference stops, it was probably caused by the PC or one of the peripheral devices.

If your PC system does cause interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the PC to one side or the other of the television or radio.
- Move the PC farther away from the television or radio.
- Plug the PC into an outlet that is on a different circuit from the television or radio. (That is, make certain the PC and the television or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary, consult an HP-authorized service provider or HP. See the service and support information that came with your HP product. Or, consult an experienced radio/television technician for additional suggestions.

Important: Changes or modifications to this product not authorized by the Hewlett-Packard Company could void the EMC compliance and negate your authority to operate the product.

This product was tested for EMC compliance under conditions that included the use of HP peripheral devices and HP shielded cables and connectors between system components. It is important that you use HP peripheral devices and shielded cables and connectors between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices. You can obtain HP peripheral devices and the proper shielded cables and connectors through an HP Authorized Reseller. For non-HP peripheral devices, contact the manufacturer or dealer for assistance. Responsible party (contact for FCC matters only): Hewlett-Packard Company, P.O. Box 4010, Cupertino, CA 95015-4010, USA

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérisé de la classe B est conforme à la norme NMB-003 du Canada.

VCCI Class B Statement

情報処理装置等電波障害自主規制について

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス B 情報技術装置です。この装置は家庭環境で使用されることを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取扱をしてください。

European Community

Complies with European Directives
72/23/EEC and 89/336/EEC.

Index

A

- AA file format 24
- AAC file format 24
- accessories 45
- addresses 37
- AIFF file format 24
- alarm 37
- Apple Lossless file format 24
- audio file format
 - AA 24
 - AAC 24
 - AIFF 24
 - Apple Lossless 24
 - converting 25
 - MP3 24
 - supported 24
 - WAV 24

B

- backlight 33
 - turning off 13
 - turning on 13
- battery 56
 - about 42
 - charging 5, 42
 - charging with iPod Power Adapter 43
 - icons 42
 - states 44
- browsing for music 9

C

- calendar events 37
- cleaning 59
- communications regulation information 60
- connecting iPod 18

D

date

- setting 34
- viewing 34

digital photos

- erasing 41
- photo card reader 41
- storing 40
- transferring 41
- viewing information 40

disabling buttons 14, 15

disconnecting cable 9

disconnecting iPod 18, 19, 20

- messages 19

Dock Line Out port 22

E

earphones 46

ejecting iPod 20

equalizer 33

external hard disk 35

F

fast-forwarding 14

FireWire adapter

- 6-pin-to-4-pin 8

FireWire card 3

FireWire ports

- 4-pin 8

G

games, playing 41

getting started 1

H

handling 59

hearing damage, avoiding 56

Help 53

Hold switch 15, 45

I

importing

- addresses 37

- calendar events 37

installing software 6

iPod

- accessories 45

- backlight timer 33

- disconnecting 9

- equalizer 33

- features 2

- not responding 47

- remote 45

- resetting 47

- tutorials 2

- using as external hard disk 35

- using speakers 22

- using with a Mac 51

iPod Dock, using 21

iTunes

- about 23

- preventing automatically
opening 36

- using, see tutorials

- version 3

iTunes Music Store

- browsing for music 24

- purchasing music 24

L

language 34

- changing 50

Line Out port 22

M

menu

- adding items 34

- removing items 34

- selecting 11

MP3 file format 24

music

- not playing 48

- organizing 23

- transferring 23

N

notes

- reading 38

- storing 38

O

online resources 54

On-The-Go playlists

- clearing 16

- playing songs 16

- removing songs 16

- saving on iPod 17

- transferring to the PC 17

P

pausing 13

phone numbers 37

photo card reader 41

photos, see digital photos

playing songs 9

playing songs in a list 13

playlists

- about 25
- about Smart Playlists 26
- creating 26
- creating new on iPod 29
- creating Smart Playlists 26
- deleting 29
- modifying on iPod manually 29
- On-The-Go, see On-The-Go
playlists 16
- transferring automatically 27
- transferring manually 28
- updating selected 27

plug adapter 43

power adapter 43, 57

purchasing music 6

R

rating songs 17

registering 54

remote 45

repairing 59

repeating songs 32

resetting iPod 13, 47

rewinding 14

S

safety information 55

serial number 54

service 54

setting Click Wheel sound 32

shuffling albums 31

shuffling songs 31

sleep timer 36

software

- installing 6

- restoring 51

- updating 51

songs

- deleting 29

- number of stored 30

- playing previous 14

- queueing 16

- rating 17

- repeating 32

- selecting 9

- shuffling 31

- skipping 14

- starting over 14

- transferring automatically 27

- transferring manually 28

- transferring selected 27

- speakers 22
 - connecting 22
 - Dock Line Out port 22
- spoken word audio 30
 - setting reading rate 30
- stored songs 30
- support 54
- supported file formats 24

T

- temperature
 - operating 58
 - storage 58
- time
 - setting 34
 - viewing 34
- tips 47
- transferring music 6, 27
 - from a CD to iTunes 6
 - purchased songs 6
 - to iPod 7, 18
- troubleshooting 47
- turning off 13
- turning on 13
- tutorials 2, 53

U

- USB
 - 2.0 card 3
 - 2.0 port 8

V

- voice memos
 - playing 39
 - recording 39
 - transferring 39
- volume
 - control 22
 - level 13, 32
 - remote control 45
 - settings 33

W

- warranty service 54
- WAV file format 24

<http://www.hp.com/music>
<http://www.hp.com/support>

Printed in China

034-2616-A